

# Instructions for removing the female coupling

---

1. Push in the two "ears" that hold the clip in place. Feel free to use a pair of pliers or similar.
2. Push the pin at the same time from the opposite side.
3. Pull out the locking clip.
4. Pull back the outer plastic cap.
5. Use a small flat-blade screwdriver to tilt out the u-clip. Pull the clip out of the slot it is in.
6. The hose is now loose from the coupling.

Mounting the female coupling is the same as disassembling, only in reverse order.

